


# FRIGIDAIRE®

All about the

# Use & Care

of your Iron

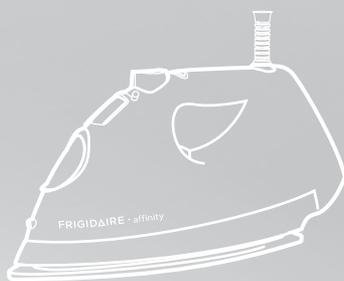

## TABLE OF CONTENTS

Important Safeguards .....	2	Using Your Iron.....	6
Iron Safety Instructions.....	3	Cleaning and Maintenance.....	8
Parts and Features.....	4	Warranty.....	9

# IMPORTANT SAFETY INSTRUCTIONS

**When using your flatiron, basic safety precautions should always be followed including the following:**

READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.

- 1 Use this iron only for its intended use.
- 2 To protect against risk of electrical shock, do not immerse the iron in water or other liquids.
- 3 The iron should always be turned off before plugging or unplugging from outlet. Never yank the cord to disconnect from outlet. Instead, grasp plug and pull to disconnect.
- 4 Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
- 5 Always disconnect iron from electrical outlet before filling with water, emptying, or when not in use.
- 6 Do not operate iron with a damaged cord, or if the iron has been dropped or damaged in any manner. To avoid the risk of electric shock, do not disassemble the iron. Take the iron to an authorized service center for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used after reassembly.
- 7 Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected, on an ironing board, or while it is still hot.
- 8 Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down; there may be hot water in the reservoir.
- 9 Never use or rest iron on an unstable surface.
- 10 When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- 11 To prevent electric shock or other injury, before filling the iron with water, make sure that the plug is removed from the outlet.
- 12 The use of accessory attachments is not recommended and may result in fire, electric shock, or personal injury.
- 13 To avoid fire, never leave iron unattended while it is plugged in.
- 14 To prevent electric shock, never use the iron in a location where it can fall or be pulled into water or another liquid. If the iron falls into water or other liquid, unplug it immediately. Do NOT reach into the water or liquid.
- 15 Never use scouring pads, abrasive or chemical cleaners, or solvents to clean the exterior or soleplate of your iron. Doing so will scratch

# IRON SAFETY INSTRUCTIONS

and/or damage the surface.

- 16 Do not aim iron or direct steam towards people or animals while using iron or adjusting steam. Burns or serious injury may occur. Do not iron clothes while they are being worn.
- 17 The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking. If the supply cord is damaged, it must be replaced by the manufacturer, its service agency or similarly qualified persons in order to avoid a hazard.
- 18 To prevent the risk of burns, be careful when filling a hot iron with water. Hot metal parts, hot water, and steam can cause injury.
- 19 This iron is for household use only.

## SPECIAL INSTRUCTIONS

- 1 This is a 1600 watt appliance. To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- 2 If an extension cord is absolutely necessary, use an 15-ampere cord. Cords rated for less amperage can result in a risk of fire or electric shock due to overheating. Use care to arrange the cord so that it cannot be pulled or tripped over.

## SAVE THESE INSTRUCTIONS

### Consumer Safety Information

**THIS UNIT IS FOR HOUSEHOLD USE ONLY.**



#### Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way.

#### Product Specifications

- |  |                         |
|--|-------------------------|
| <input type="checkbox"/> Model Number  | FAFI15D7MR / FAFI15D7MN |
| <input type="checkbox"/> Rated Voltage | 120V/60HZ               |
| <input type="checkbox"/> Rated Wattage | 1600W                   |
| <input type="checkbox"/> Made In China |                         |

# PARTS AND FEATURES

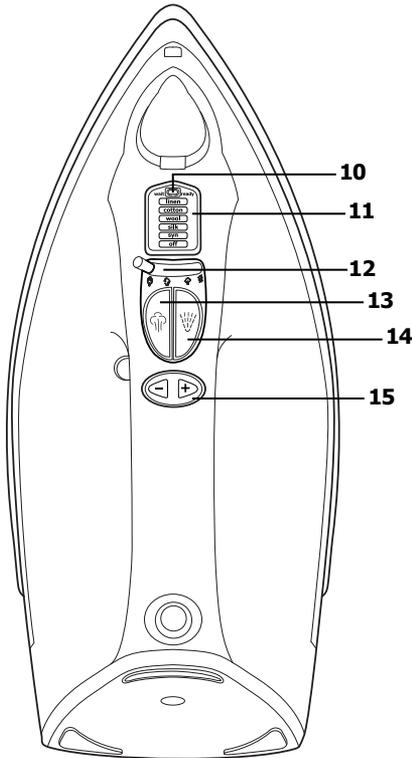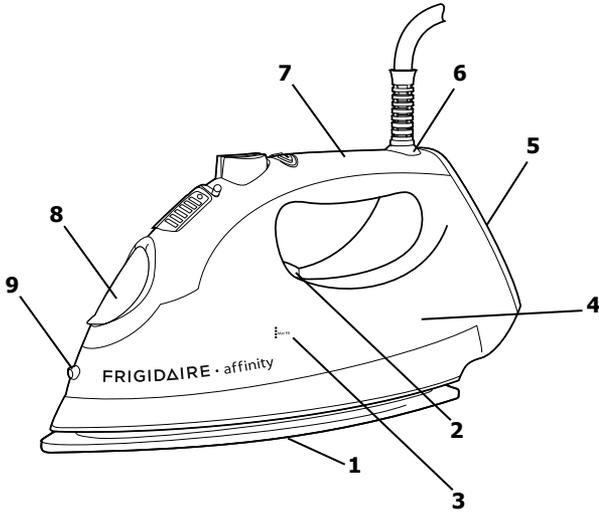

- 1** Sole Plate
- 2** Self-Clean Button
- 3** Maximum Fill Line
- 4** Water Reservoir
- 5** Non-slip Heel Rest
- 6** Swivel Cord
- 7** Soft Grip Handle
- 8** Water Fill Hole
- 9** Water Mist Nozzle
- 10** Wait/Ready Indicator
- 11** Fabric Indicator
- 12** Steam Selector
- 13** Steam Burst/Vertical Steam Button
- 14** Water Mist Button
- 15** Fabric Selector Buttons

## Auto-Off

As a safety feature, the auto-off function will turn off the heat to the soleplate if the iron is not moved within a certain amount of time. If the iron is placed on the soleplate or either side without movement, then the heat will turn off after 30 seconds. If the iron is placed on the heel rest without movement, then the heat will turn off after 15 minutes. The Off Indicator will flash to indicate that the iron has entered into the Auto-Off mode and that no heat is being supplied to the soleplate. To resume use of the iron after it has entered into the Auto-Off mode, initiate movement of the iron. Depending on how long the iron has been in the Auto-Off mode, you may need to allow it to heat back up. The Ready Indicator will illuminate when the iron has heated back up to the previously set fabric selection. If the iron is left in the Auto-Off mode, it will shut off completely after 5 minutes of entering the Auto-Off mode.



## WARNING

**The Auto-Off function is designed as a safety feature and should not be used as the primary method of turning off the iron. The "Using Your Iron" section contains information on properly turning off the iron.**

## Non-Drip System

The iron is capable of generating steam, even at reduced temperatures, without water drips, sputters, or leaks coming through the soleplate steam holes.

## Vertical Steam

The iron is capable of being used as a garment steamer using the Steam Burst/Vertical Steam Button.

## Anti-Calcium System

The iron contains an anti-calcium system that reduces calcium accumulation on the soleplate by removing calcium from the water inside the reservoir.

# USING YOUR IRON

## Filling the Water Reservoir

- 1 Always ensure that the iron is unplugged from the wall outlet prior to filling the water reservoir.
- 2 If filling a hot iron, exercise extreme caution.
- 3 Set the Steam Selector to the Off position, open the cover of the Water Fill Hole and place the iron in a vertical position.
- 4 Pour water into the Water Fill Hole, making sure that the water level does not exceed the Maximum Fill Line.

## Ironing

- 1 For both dry and steam ironing, set the Steam Selector to the Off position. If you will be steam ironing, follow the "Filling the Water Reservoir" steps.
- 2 Insert the power cord plug into a 120-Volt AC outlet.
- 3 Press the Fabric Selector buttons to illuminate the type of fabric that will be ironed and then place the iron on the heel rest to allow it to heat up.
- 4 While the iron is heating up, the Wait Indicator will be illuminated. Once the iron is heated for the selected fabric, the Ready Indicator will illuminate. The iron is now ready for use.
- 5 If steam ironing, set the Steam Selector to the desired level of steam output.

## Turning Off and Storing the Iron

- 1 Press the (-) Fabric Selector button until the lights turn off.
- 2 Set the Steam Selector to the Off position.
- 3 Unplug from the outlet by grasping the plug and pulling. Never yank the power cord to unplug the iron as this may damage the plug and cable.
- 4 If the iron will not be used the following day, empty the water reservoir. Ensure the iron is unplugged and turn upside down over a sink. Open the cover of the Water Fill Hole and empty the water into the sink, gently shaking out any water drops.
- 5 Allow the iron to cool completely. Loosely circle the cord around the heel rest and store the iron resting on the heel rest. Do not wrap the cord too tight as this could damage the cord.

## Using the Water Mist

- 1 Whether dry or steam ironing, press the Water Mist Button while ironing to spray a mist of water onto the fabric in front of the iron.
- 2 Iron over the moistened fabric to dry.

## Using the Steam Burst

- 1 Ensure that the Water Reservoir is no less than a quarter full.
- 2 Whether dry or steam ironing, press the Steam Burst/ Vertical Steam Button to deliver a burst of steam through the soleplate.
- 3 Allow 3 seconds between consecutive bursts of steam.

## Vertical Steaming

- 1 Fill the Water Reservoir, plug in the iron and select the fabric type according to the steps above.
- 2 Place garment on clothing hanger.
- 3 Once the Ready Indicator illuminates, hold the iron vertically with the soleplate close to the garment but not touching it.
- 4 While pulling the garment tight, press the Steam Burst/ Vertical Steam Button to release a burst of steam into the garment. Move the iron across the garment while pressing the Steam Burst/Vertical Steam Button in 3 second intervals.
- 5 To prevent the risk of burns, keep your hand away from the area being steamed. To prevent the risk of injury, do not steam garments while they are being worn.

# CLEANING AND MAINTENANCE

## Cleaning the Soleplate

- 1 Unplug the iron and allow it to cool down.
- 2 Wipe the soleplate with a soft, damp cloth.
- 3 Do not use abrasive cleaners, scouring pads or vinegar to clean the soleplate as this will damage the finish.

## Operating the Self-Clean Function

- 1 Perform the Self-Clean once a month to ensure the performance of the iron.
- 2 Unplug the iron and cycle the Steam Selector from left to right 5 times.
- 3 Fill the water reservoir with water to the Maximum Fill Line.
- 4 Plug in the iron, select Linen on the Fabric Selector, and wait for the Ready Indicator light to illuminate.
- 5 Unplug the iron from the outlet.
- 6 Hold the iron horizontally over a sink. Exercise caution not to touch the hot soleplate.
- 7 Press and hold the Self-Clean button for 30 seconds while slowly rocking and tilting the iron in all directions. Water will start dripping from the steam holes on the soleplate. Ensure the front of the iron is tilted lower than the rear when rocking for optimum cleaning.
- 8 Open the cover of the Water Fill Hole and pour out remaining water by turning the iron upside down.
- 9 Dry the soleplate with a towel and set the iron on the heel rest.
- 10 Plug in the iron, select Linen on the Fabric Selector, and wait for the Ready Indicator light to illuminate. This will heat up and dry the inside of the iron.
- 11 Once the iron has heated up for the Linen setting, press the (-) Fabric Selector to Off and unplug the iron from the outlet. Allow the iron to cool and then store.

## WARRANTY

Your appliance is covered by a **one year limited warranty**. For one year from your original date of purchase, Electrolux will repair or replace the appliance or parts, at Electrolux's option, that prove to be defective in materials or workmanship when the appliance is installed, used, and maintained in accordance with the provided instructions. Labor and all costs associated with returning the appliance or parts to us and our returning the appliance or parts to you are excluded under this warranty. As a matter of warranty policy, Electrolux will not refund the consumer's purchase price. If a product or part under warranty is no longer available, Electrolux will replace with a comparable product of equal or greater value.

### **Exclusions: This warranty does not cover the following:**

- 1** Products with original serial numbers that have been removed, altered or cannot be readily determined.
- 2** Products that have been transferred from the original owner to another party or removed outside the USA or Canada.
- 3** Rust on the interior or exterior of the unit.
- 4** Products purchased "as-is".
- 5** Food loss due to product failure.
- 6** Products used in a commercial setting or anything but single family household use.
- 7** Labor or service visits under any circumstance.
- 8** Glass parts or containers, filters, non-stick surfaces.
- 9** Ordinary wear and tear.
- 10** Damages caused by improper use, installation, or service; use of parts other than genuine Electrolux parts; negligence; abuse; misuse; inadequate or excessive power supply; accidents; fires; or acts of God.

Keep your receipt or some other appropriate payment record to establish the warranty period. Should warranty service be required, you must show proof of purchase.

### **If You Need Service:**

To obtain warranty service in the USA or Canada, call 1-888-845-7330. Please have the model number, serial number, and date of purchase information available.

## **DISCLAIMER OF IMPLIED WARRANTIES; LIMITATION OF REMEDIES:**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE, AT ELECTROLUX'S SOLE DISCRETION, PRODUCT OR PART REPAIR OR REPLACEMENT AS PROVIDED HEREIN. CLAIMS BASED ON IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR OR THE SHORTEST PERIOD ALLOWED BY LAW. ELECTROLUX SHALL NOT BE LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES SUCH AS PROPERTY DAMAGE AND INCIDENTAL EXPENSES RESULTING FROM ANY BREACH OF THIS WRITTEN LIMITED WARRANTY OR ANY IMPLIED WARRANTY. SOME STATES AND PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES, SO THESE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WRITTEN WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE.

This warranty only applies to products purchased in the USA and CANADA. In the USA, your appliance is warranted by Electrolux Home Care Products, Inc. In Canada, your appliance is warranted by Electrolux Home Care Products Canada Inc. Electrolux authorizes no person to change or add to any obligations under this warranty. Product features or specifications as described or illustrated are subject to change without notice.

### **USA**

**1-888-845-7330**

Electrolux Home Care Products, Inc.  
10200 David Taylor Drive  
Charlotte, NC 28262

### **CANADA**

**1-888-845-7330**

Electrolux Home Care Products Canada Inc.  
5855 Terry Fox Way  
Mississauga, ON, Canada L5V 3E